


# ROUTER LIGHT INDICATION

**time**<sup>TM</sup>


# HUAWEI HG8145V5

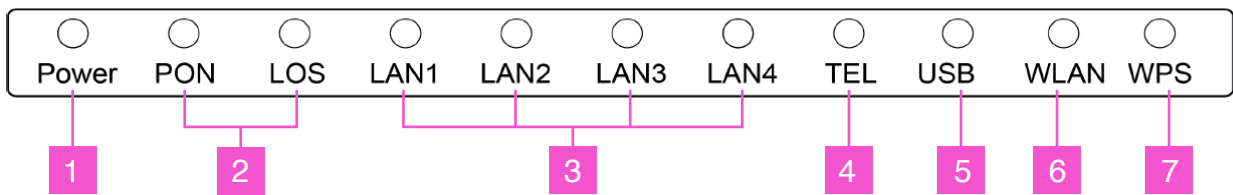

NO	NAME	STATUS	INDICATION
1	Power	Steady on	The ONT is powered on.
		Off	The power supply is cut off.
2	PON/LOS	See the following table.	
3	LAN1-LAN4	Steady on	The Ethernet connection is in the normal state.
		Blinking	Data is being transmitted over the Ethernet port.
		Off	The Ethernet connection is not set up.
4	TEL	Steady on	The ONT is registered with the softswitch but no service flows are transmitted.
		Blinks twice a second	The ONT is registered with the softswitch, and the data is being transmitted on the port.
		Blinks once every 2 seconds	The ONT fails to be registered with the softswitch.
		Off	The POTS port is disabled.
5	USB	Steady on	The USB port is connected and working in the host mode, but no data is being transmitted.
		Blinking	Data is being transmitted on the USB port.
		Off	The system is not powered on or the USB port is not connected.
6	WLAN	Steady on	The WLAN function is enabled.
		Blinking	Data is being transmitted on the USB port.
		Off	The system is not powered on or the USB port is not connected.
7	WPS	Steady on	The WPS function is enabled
		Blinking	A Wi-Fi terminal is accessing the system.
		Off	The WPS function is disabled.

NO	PON STATUS	LOS STATUS	INDICATION
1	Off	Off	The ONT is prohibited by the upper-layer device or blinks abnormally. Contact the service provider for help.
2	Blinks twice a second	Blinks twice a second	
3	Blinks twice a second	Off	The ONT attempts to set up a connection with its upper-layer device.
4	Steady on	Off	A connection is set up between the ONT and its upper-layer device.
5	Off	Blinks once every 2 seconds	The ONT is not connected to fibers or does not receive optical signals.
6	Blinks once every 2 seconds	Blinks once every 2 seconds	The hardware is faulty.

# HUAWEI WA8021V5

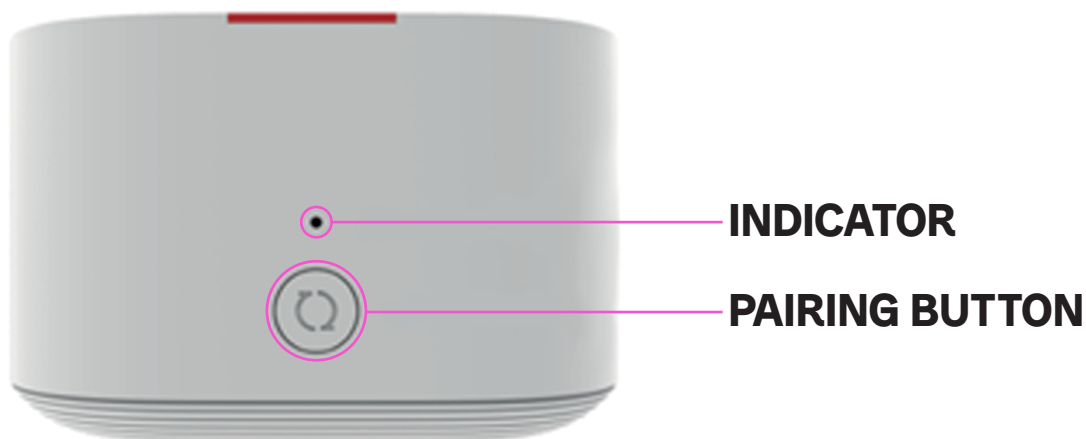

STATUS	INDICATION
White: steady on	Internet access is available.
Red: steady on	Internet access is unavailable. 1. The edge ONT is being powered on. 2. The edge ONT is not connected to the upstream gateway.
Red: Blinking slowly (once per second)	The edge ONT has detected a device that can be paired.
Wireless	The edge ONT is being paired with Huawei gateway in one-click mode. The edge ONT is performing WPS pairing.